

TROLLEY ROLL'IN

Assembly notice

You have just purchased the ROLL'IN trolley from RTM.

This transport trolley is delivered unassembled in a cardboard box. We strongly advise you to keep these instructions and user manual.



Insert the wheel in the axis of the base, valve towards the outside.



Insert the pin through the holes drilled in the axle.



Close the pin again to prevent the wheel from coming out.



The cart is ready. You can place it under your boat.

Material	<i>Polyethylene body - Aluminium axle - Brass inserts</i>
Dimensions	<i>17.72" x 13.45" x 8.69"</i>
Weight	<i>6.61 lbs</i>
Capacity max.	<i>132.28 lbs</i>
Capacity	<i>1 Boat</i>

The ROLL'IN trolley is designed to transport a canoe or kayak with human traction or push, whatever the type of hull. It is particularly recommended for sea kayaks, canoes. It is also very well suited for SIT ON TOP.

• User guide - Warning

The ROLL'IN trolley is positioned under the hull in different ways depending on the boat model.

Canoes: centre of the boat.

Kayak: between the center and the back 1/3 of the boat.

Remarks : The closer the cart is to the end of the boat, the heavier it will be to carry. The strap must be fitted and tightened during transport.

The ROLL'IN allows a maximum load of 60kg. It is possible to transport equipment while respecting the maximum load (boat + equipment) and balancing its load.

The TRACTION (or POUSSEE) of the TROLLEY/EMBARCATION assembly is carried out by the boat's gripping systems and is exclusively manual.

The CHARIOT/EMBARCATION unit must never be towed by a vehicle (bicycle, moped, car, motorcycle, coach). When sailing, the transport cart must be removed from the boat. It can be fixed on deck or in the boat without hindering the evolution and safety of the paddler. The cart must be removed from the boat when transporting it on a vehicle or trailer.

The ROLL'IN is designed for transport, not for prolonged storage of the boat. The ROLL'IN trolley is unsinkable.

• Maintenance and storage guide - After-sales service

Rinse the cart and its components after each use.

Check the condition of the wheels before each use.

Store the cart in a dry place away from heat.

For prolonged storage, it is recommended to store it upside down.

The following spare parts can be ordered from your ROTOMOD dealer: pins, wheels, straps, screws (see parts list).

The ROLL'IN trolley is guaranteed for one year from the date of purchase of the new product. ROTOMOD recommends compliance with the recommendations and restrictions in this manual. Any requests for after-sales service after inappropriate use cannot be taken into account. Similarly, any modification of the product will void this warranty.

• Nomenclature

Qté	Ref.	Designation	Images
2	GOUCL4.5	Clip pin D.4.5	
1	BASCHARTRAPOL	ROLL'In trolley base	
2	ROUCHAR260	Carriage wheel 260 plain hub D.25	
2	VISMEIN6X16TBHCEMLOC	Stainless steel metal screws A2 TBHC 6 x 16 base + thread brake	
2	CACSAN25	Strap cover 25 mm	
1	SANCHAR	Polypro strap for trolley	
2	BCHAIL25	Fin plug for 25" tube	